

# INNOSILICON

## S11 USER MANUAL



## Table of Contents

<b>1. OVERVIEW</b>	<b>1</b>
<b>2. ASSEMBLE THE MINER</b>	<b>2</b>
2.1 Check the miner before power on	2
2.2 Connect the PSU	3
2.3 Connect the Ethernet Cable	3
<b>3. OPERATE THE MINER</b>	<b>4</b>
3.1 Enter the miner console	4
3.2 Set up the pool	4
3.3 Check the hashrate of the miner	5
3.4 Network configuration	5
3.5 Other pages	6
3.5.1 Overview	6
3.5.2 Upgrade	6
3.5.3 Modify the password	7
3.5.4 Reboot	7
3.5.5 Factory reset	7

## 1. OVERVIEW



Part Number	S11
Algorithm	Blake2b
Hash Rate	4.3Th/s (+-8% )
Power	1380W +/-8%
Size (LxWxH)	(L)290mm*(W)130mm*(H)155mm
Net Weight	3.7KG (without PSU)
Operating Temperature	0-40 ℃
Required rated PSU	1600W or above, 10 * PCI-E 6Pin
Network Connection	Ethernet

## 2. ASSEMBLE THE MINER


### 2.1 CHECK THE MINER BEFORE POWER ON

- Check the warranty sticker is well or not, especially the hashboards PSU port side. If the warranty sticker is damaged when you received the miner, please contact our After-sales.
- Before you power on the miner, shake the miner softly, if you can hear the sound of metal banging on metal, please contact our After-sales.
- Check if the fan work well, if you find the fans broken please contact our After-sales.
- Check the cable connection, if it is different from below picture, please connect the cables as below.



## 2.2 CONNECT THE PSU

Every hash board needs to be inserted with 3 PSU cables, controller only needs 1 PSU cable according to the following image .

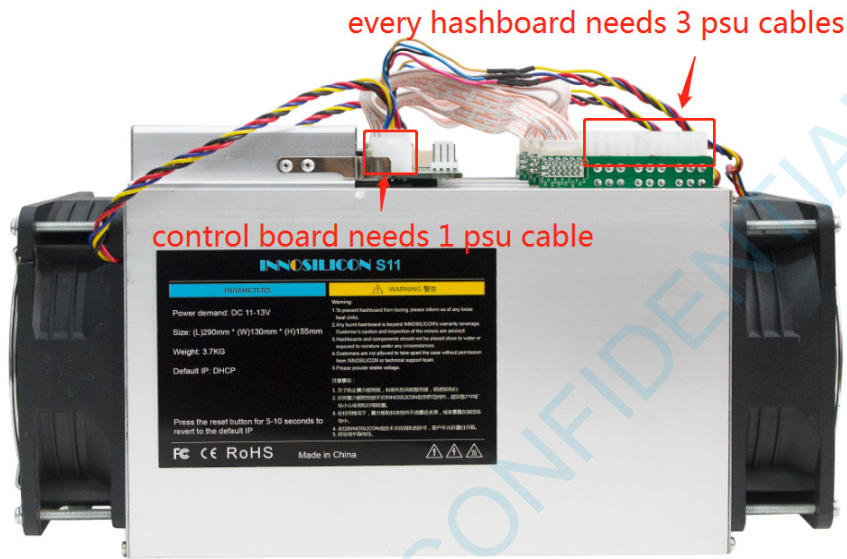

## 2.3 CONNECT THE ETHERNET CABLE

Insert one end of the Ethernet cable into the router and the other end into the slot shown in the following image, you should plug in the miner one by one, only when you have accomplished IP Setting of the previous one you can plug in another miner .



**IP SET button:** Press it more than 5 seconds to recover the IP to 192.168.1.25


Press it more than 20 seconds to switch the Dynamic (Static) IP to Static (Dynamic) 4.

**RESET button:** Your miner will restart if you press it. It wont recover your settings to the default.


## 3. OPERATE THE MINER

### 3.1 ENTER THE MINER CONSOLE

DHCP(the Normal led on the control board should be blinking) is the default IP mode of the miner, find the IP via the router or the IP scanner. Enter the IP of the miner on the browser and press the Enter button. The chrome is the suggested browser.

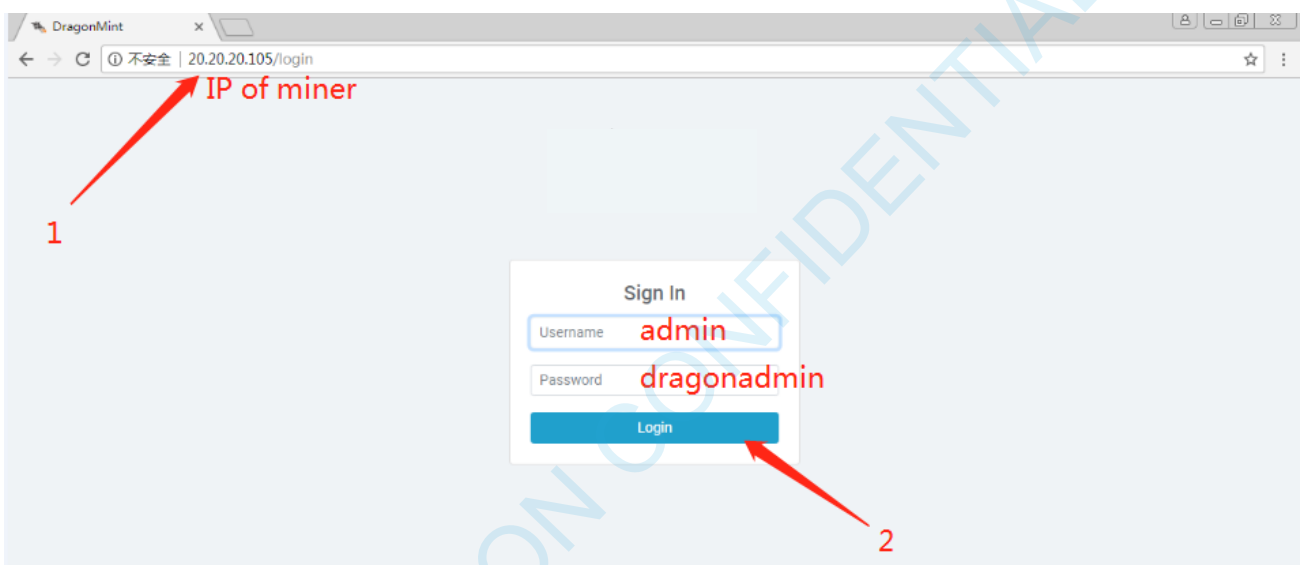


### 3.2 SET UP THE POOL

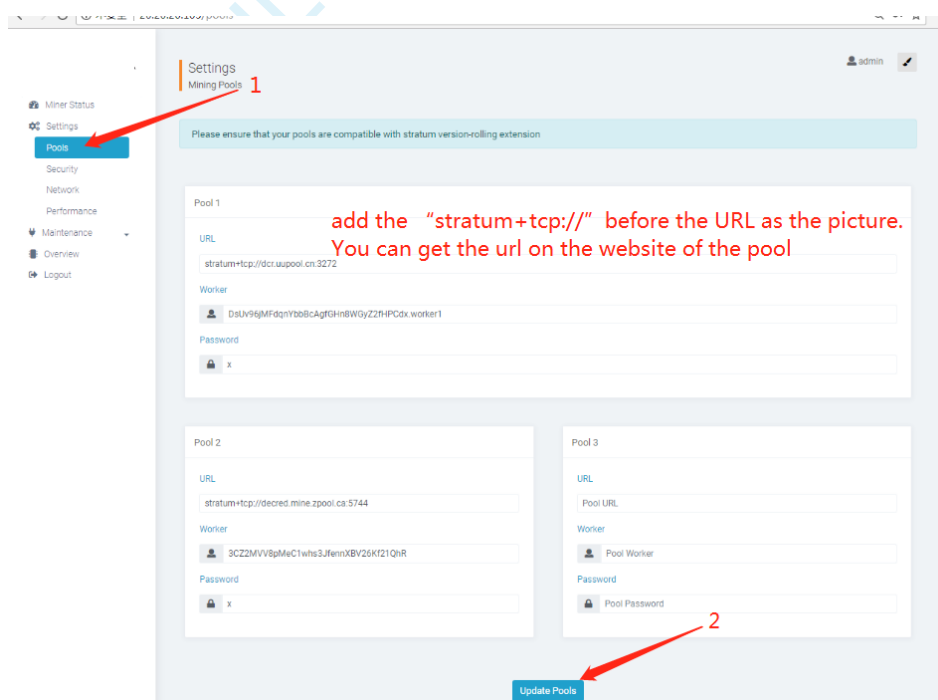



## 3.3 CHECK THE HASHRATE OF THE MINER

After set up the pool, the miner will mine for you.

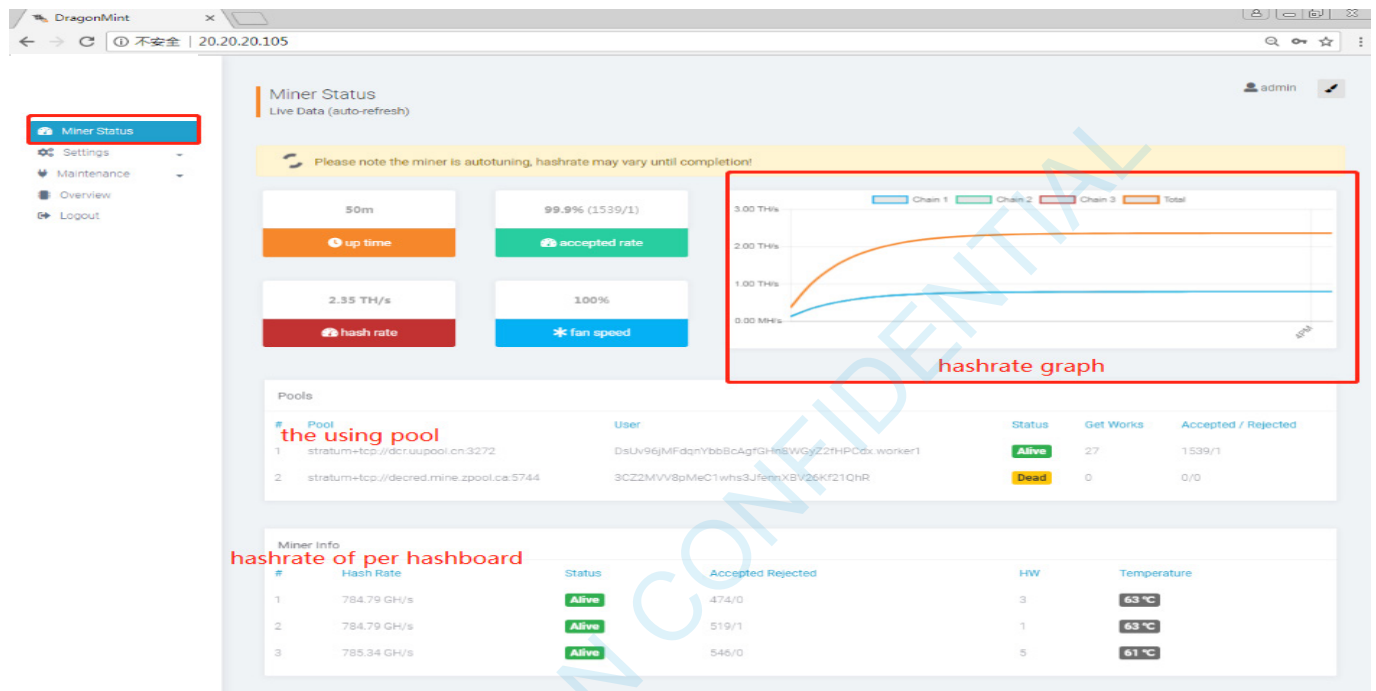

## 3.4 NETWORK CONFIGURATION



## 3.5 OTHER PAGES

### 3.5.1 OVERVIEW

DragonMint Overview

Miner Status

Version	
Type	B29
Controller Version	g19
MAC Address	a0.b0:45:00:2f:94
Build Date	17th of April 2018 12:42 PM
Platform Version	b29_20180417_124258

Network Status

Type	dhcp
IP	20.20.20.105
Netmask	255.255.255.0
Gateway	20.20.20.1
Name Server 1	208.67.222.222
Name Server 2	

System

Uptime: 08:08:10 up 57 min, load average: 0.73, 0.73, 0.67

Memory Used: 55336 kb / 250544 kb (22%)

Memory Free: 195208 kb / 250544 kb (78%)

Cached Used: 33676 kb / 244628 kb (14%)

Cached Free: 210952 kb / 244628 kb (86%)

### 3.5.2 UPGRADE

DragonMint Maintenance Firmware

Upgrade

1. The update .swu file should be obtained from our support center
2. Do not power off or refresh this page during the upgrade process
3. All your settings will be preserved

选择文件 未选择任何文件

Upgrade Now


Latest Firmware

Check for firmware updates


Check Now



## 3.5.3 MODIFY THE PASSWORD

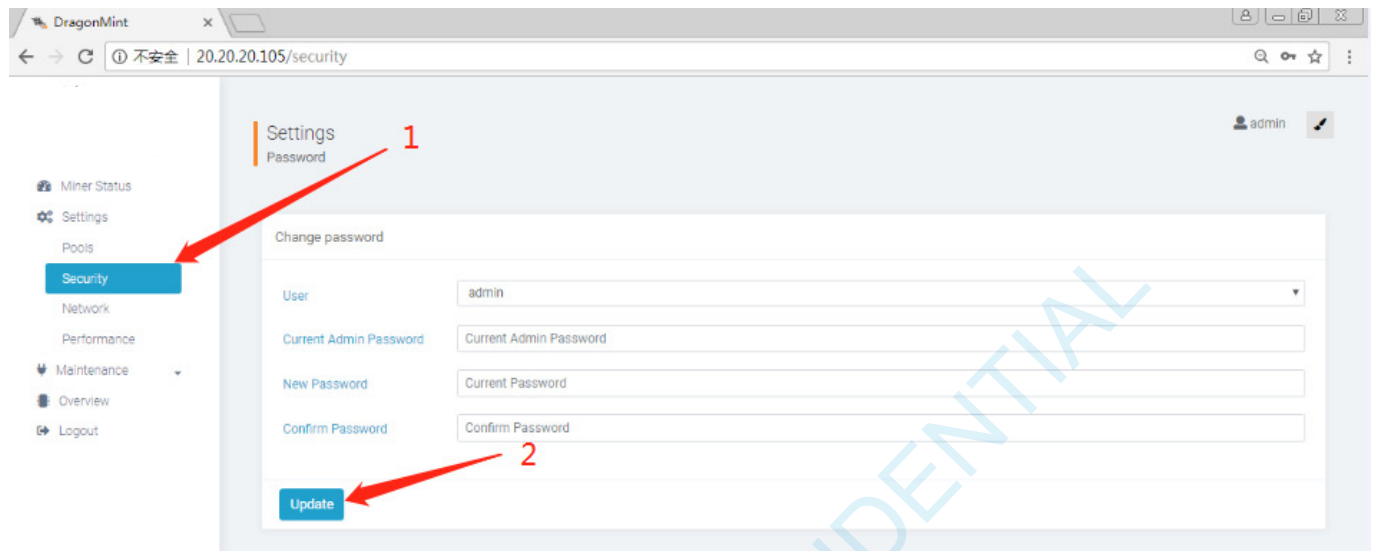

## 3.5.4 REBOOT

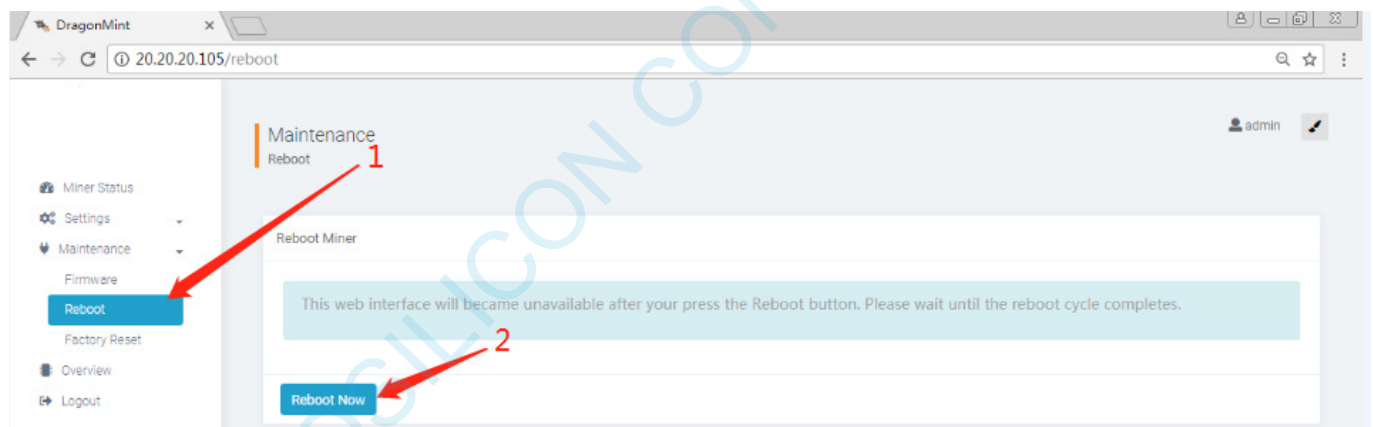

## 3.5.5 FACTORY RESET

